


Assembling the boom

Fit together the centre section of the boom

Push the white joints on to the pipes firmly

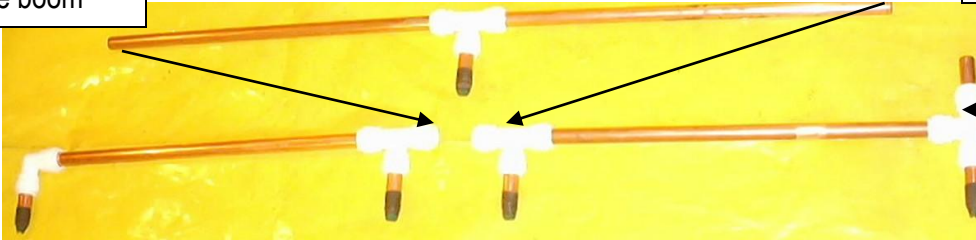

Joint to the pump

1. Join the 2 plastic strips to support the boom.



2. Evenly space the white clips along the plastic support and clip the boom securely into place.

This 6ft boom fits directly onto the metal carrier supports. These are attached to the ATV rear rack.



For travelling the booms should be detached and both held in the boom holders.

Warm the ends of the plastic pipe before connecting to the booms. Secure with the provided jubilee clip.

Before first use, remove spray nozzles and flush system thoroughly to remove any particles or packing. This will reduce the need for cleaning once the chemical is present.

The Servanté A.T.V Boom Spray Systems

Servanté Systems, Morecambe Ville, Star Street, Ulverston, Cumbria LA12 7BY
Phone: 01229 583580 Fax: 01229 580599 Email: enquiries@servantesystems.co.uk